


# Veritas Radiation Shielded Bi-Parting Sliding Door System

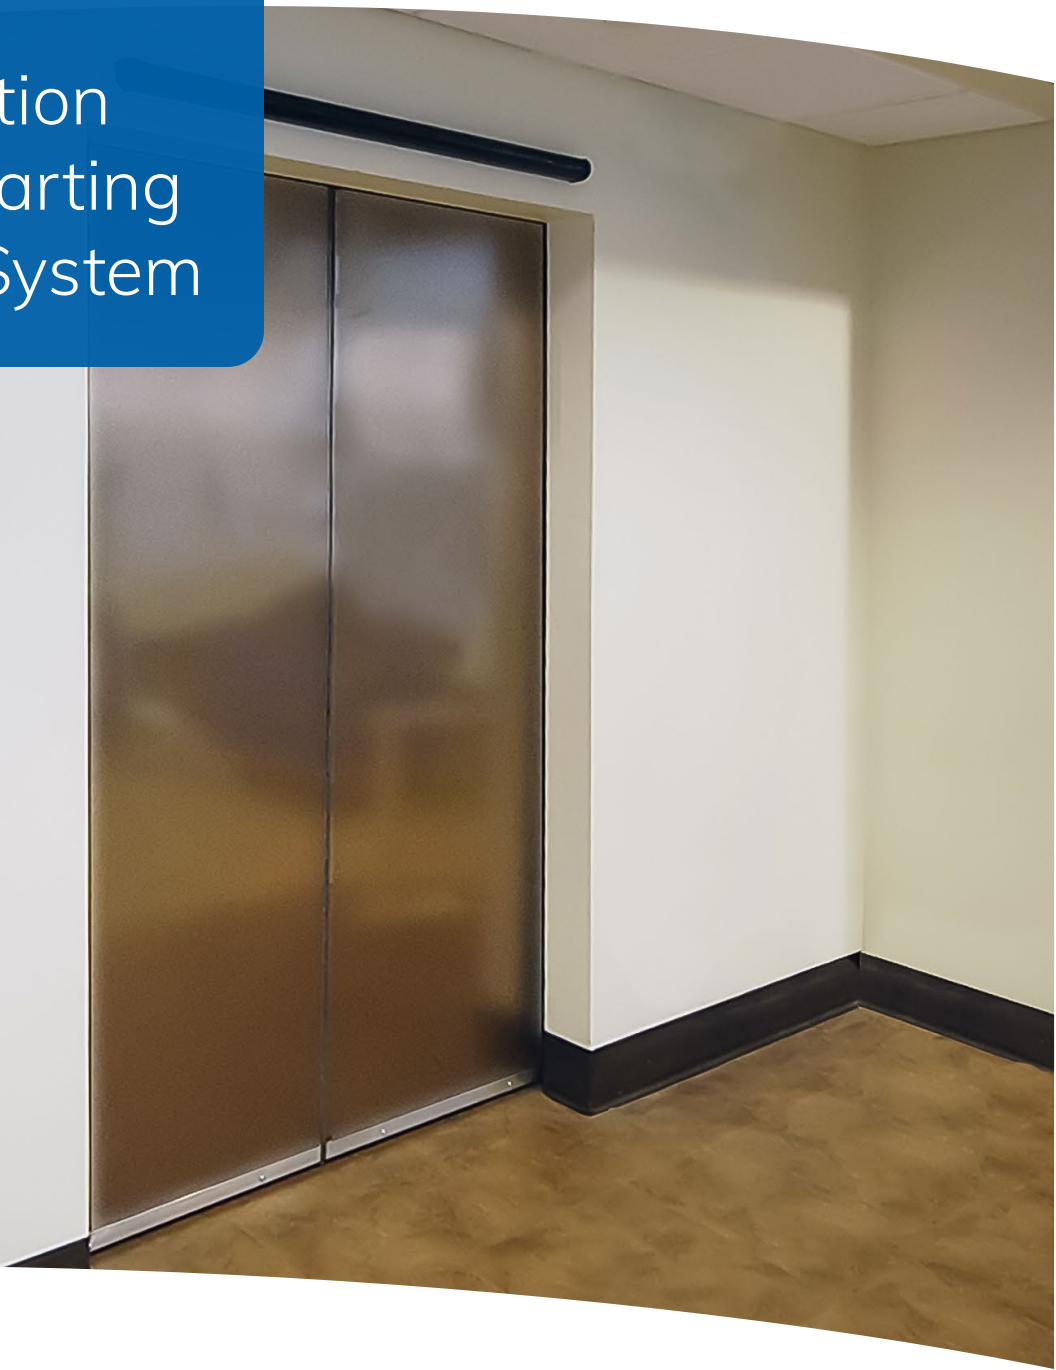

Save time. Save space. Save lives.

**veritas**  
Medical Solutions


# The fastest, safest and most reliable sliding s

## Introducing the world's best sliding door

The innovative Veritas SmartDoor® bi-parting radiation shielded door system offers dramatic improvements over industry-standard operating times of 25 to 30 seconds.

Electronic control allows the speed of the door to be set at the operating speed that best suits your workflow. Advanced drive technology and precision electronic control allow open/close speeds to be infinitely adjusted.

Redundant safety systems ensure optimum personnel protection including unique optional safety doors that close in advance of the shielded doors. The doors can also be opened manually in the event of an emergency power-off condition.

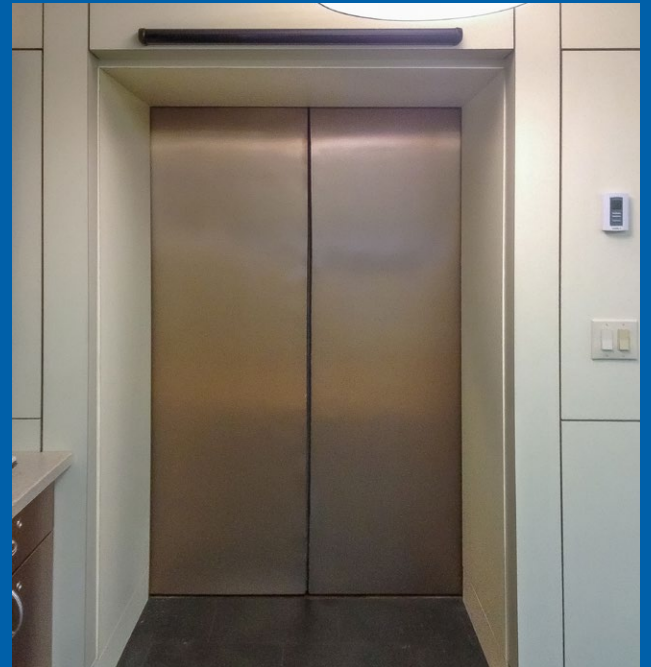


VeriShield® ultra-high density modules provide full radiation attenuation, and a unique sine wave interlock between the doors eliminates any straight line seams.



### ZERO RADIATION LEAKAGE

Each bi-parting door segment features a sine-wave shaped leading edge. This unique Sine-Wave Interlock™ eliminates straight line leakage paths for radiation streaming.

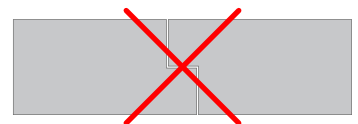


# Shielded radiation doors available.



## SmartDoor control information technology

- Fastest doors in the world open or close in 6–8 seconds
- Sine-wave shaped leading edge interlock eliminates straight line seams and radiation streaming
- Designer graphics and finishes available
- SmartDoor touch screen interface allows complete access to acceleration/deceleration ramps, preventive maintenance calendars, lock out codes and many more features with a simple touch of the screen
- Remote login diagnostic software reports on faults via network connection for immediate troubleshooting
- Multiple safety systems ensure personnel protection optional decorative safety doors close in advance of the radiation protective doors, providing an extra measure of safety by preventing access while the radiation doors are in motion
- Heavy-duty, low maintenance drive system for maximum reliability



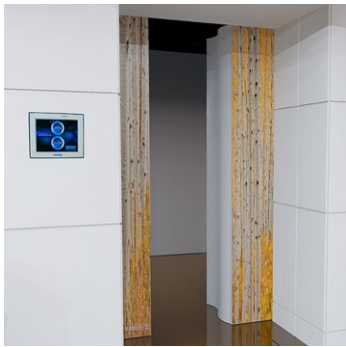

## Experience

Veritas SmartDoors bi-parting doors represent the culmination of years of radiation shielding and healthcare facility design development. With expertise in all aspects of treatment room shielding and construction, we are uniquely qualified to innovate the door system and its breakthrough technology.

In-house Veritas services include:

- Physics
- Engineering and architectural support
- Project management
- Manufacturing and installation services

Veritas is the world leader in radiation shielding, radiation protective door systems, and modular room interiors.

To learn more about the future of therapy engineering and construction, call **888-242-6760** or visit **veritas-medicalsolutions.com** today.



### SMARTDOOR® SHIELDED DOORS

With operating times as fast as 6 to 8 seconds, advanced Veritas radiation-shielded doors eliminate the need for doorless or maze openings.



### SMARTSUITE® INTERIORS

Veritas can work with your general construction team as a single-source provider for a radiation-shielded room solution with all the features you need to meet your exact requirements.



### SMARTVUE® WINDOWS

Get a vision for a therapy environment with window glass that lets patients see outside the room—then “frosts over” as radiation shielding moves behind the glass and lights dim as treatment begins.



VERITAS-MEDICALSOLUTIONS.COM